



HANDPIECE MAINTENANCE

IMPACT HANDPIECE

The impact handpiece must be kept clean for proper operation. If operation becomes sluggish, erratic, or fails to operate, cleaning is indicated.

TO CLEAN HANDPIECE:

1. Remove hose connector, piston and spring.
2. Clean all parts thoroughly with Alcohol based solvents **ONLY**.
3. Reassemble and test.


Occasionally place a drop of oil on the handpiece chuck threads and jaws. Only use Teflon grease on Quick Change holders. This will extend useful life, and improve operation.

Only use Teflon grease on Quick Change holders.

ONLY USE OIL ON THESE PARTS SHOWN IN THE BOX.

DO NOT USE OIL

SET SCREW ONLY

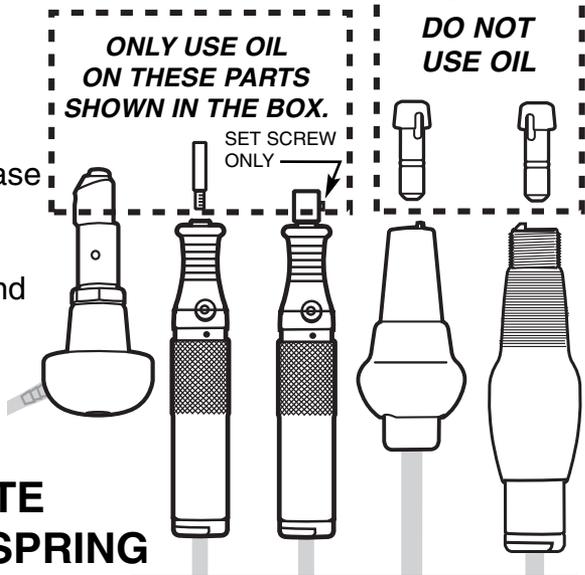

IMPORTANT:



DO NOT LUBRICATE PISTON, SPRING OR BORE.

ROTARY HANDPIECE

Refer to the operating instructions for operation and routine maintenance of the rotary handpiece.



GRS Tools
900 Overlander Road
Emporia, KS 66801 USA

1-800-835-3519

Fax: 620-343-9640

Tel: 620-343-1084

e-mail: GRS@GrsTools.com

Lit#145